



TP-Link TL-WR542G

Робимо інтернет швидким **з думкою про Вас**



- 1. Під'єднайте кабель підключення послуги Kyivstar до порту WAN, а кабель Вашого комп'ютера до одного з портів LAN. Водночас на передній панелі повинні горіти чи блимати зеленим індикатори Power, WAN, один з портів LAN (від 1 до 4).
- 2. Мережева карта Вашого комп'ютера повинна бути налаштована у режимі отримання автоматично **IP-адреси** та **DNS-ім'я**.
- 3. Відкрийте Internet Explorer або будь-який інший другий браузер та в адресному рядку наберіть http://192.168.0.1
- 4. Після цього Ви побачите інтерфейс управління роутером.



Введіть логін **admin** та натисніть **Enter**.

Website found. Waiting for re





5. Переходимо у закладку Network — WAN і налаштовуємо з'єднання.

Налаштування L2TP. Для цього необхідно виставити наступні параметри:

- 1) WAN Access Type L2TP;
- 2) username Ваш логін із заявки на підключення.

Логін має виглядати так: XXXXXXXXX, де XXXXXXXX – номер Вашого договору.

- 3) Password Ваш пароль із заявки;
- 3) **Dynamic IP**;
- 4) Server IP Address/Name tp.kyivstar.ua;
- 5) Connected Automatically.

NR542G	WAN Connection Type:
WAN Connection Type:	If your ISP is running a DHCP server, select the Dynamic IP op
User Name: XXXXXXXXX	If your ISP provides a static or fixed IP Address, Subnet Mask, or and DNS setting, select the Static IP option.
Password:	If your ISP provides a PPPoE connection, select PPPoE option
Connect On Disconne	Disconnected! If your ISP provides IEEE802.1X connection, please 802.1X+Dynamic IP or 802.1X+Static IP option.
O Dynamic IP Static IP	If your ISP provides BigPond Cable (or Heart Beat Signal) con
Server IP Address/Name: tp.kyivstar.ua	please select BigPond Cable option.
IP Address: 0.0.0.0	If your ISP provides L2TP connection, please select L2TP option
Subnet Mask: 0.0.0.0	If your ISP provides PPTP connection, please select PPTP on
Gateway: 0.0.0.0	
DNS: 0.0.0.0, 0.0.0.0	User Name/Password - Enter the User Name and P provided by your ISP. These fields are case-sensitive.
Internet IP Address: 0.0.0.0	Connect on Demand - You can configure the router to discom
Internet DNS: 0.0.0.0, 0.0.0.0	(Max kile Time). If your internet connection has been termin to inactivity. Connect on Demand enables the router to auto re-establish your connection as soon as you attempt to ac
MTU Size (in bytes): 1460 (The default is 1	, do not change unless necessary.) Internet again. If you wish to activate Connect on Demand, radio button. If you want your Internet connection to remain ac
Max Idle Time: 15 minutes (0 mean	emain active at all times.) times, enter 0 in the Max Idle Time field. Otherwise, enter the of minutes you want to have elapsed before your internet co terminates.
WAN Connection Mode: O Connect on Demand	Caution - Sometimes the connection cannot be disco
 Connect Automatically 	applications visit the Internet continually in the background.

6. Натисніть кнопку Save, а потім Connect.

Налаштування з'єднання завершено.



Робимо інтернет швидким **з думкою про Вас**



4

Налаштування статичної маршрутизації

Щоб користуватися локальними ресурсами, необхідно налаштувати статичну маршрутизацію на Вашому пристрої. Для цього переходимо на закладку **Static Routing**:

- 1) вибираємо Add New;
- 2) у полі Destanation IP Address 10.0.0.0;
- 3) Subnet Mask 255.0.0.0;
- 4) у полі Default Gateway основний;
- 5) Status Enabled.

TP-LINK 54M Wireless Router with eXtended Range™			
S4M Wireless Router Model No: TL-WR5416 /TL-WR5426 • Status - Basic Settings • Outek Setup • Network • Wreless - Advanced Settings • DHCP • Forwarding • Static Routing • IP & MAC Binding • Oynamic DNS - Maintenance • System Tools	Static Routing	 Static Routing Help Astatic route is a pre-determined path that network information must follow to reach a specific host or network. Use the Static Routing page to add or delete a route. To add static routing entries: Click the Add New button. Enter the following data: Destination IP Address - The Destination IP Address is the address of the network or host that you want to assign to a static route. Subnet Mask - The Subnet Mask determines which portion of an IP address is the network portion, and which portion is the host portion. Default Gateway - This is the iP address of the default gateway device that allows for the contact between the router and the network or host. Select the Enabled in the Status pull-down list. Click the Save button to save the changes. 	
54M Wireless Router Model No: TL-WR541G /TL-WR542G Status Basic Settings - Outck Setup Network Network Network Network - Metwork Status - Advanced Settings - Advanced Settings - Status Status - Mance Status - DHCP Status - Mance DHS - Mance DHS - Maintenance - System Tools	Add or Modify a Static Route Entry	Static Routing Help A static route is a pre-determined path that network information must follow to reach a specific host or network. Use the Static Routing page to add or delete a route. To add static routing entries: 1. Click the Add New button. 2. Enter the following data: • Destination IP Address - The Destination IP Address is the address of the network or host that you want to assign to a static route. • Subnet Mask - The Subnet Mask determines which portion of an IP address is the network portion. and which portion is the host portion. • Default Gateway - This is the IP address of the default gateway device that allows for the contact between the router and the network or host. 3. Select the Enabled in the Status pull-down list. 4. Click the Save button to save the changes.	

Щоб подивитися адресу основного шлюзу, необхідно підключити мережевий кабель від обладнання до Вашого комп'ютера (минаючи роутер) і виконати наступні команди:

a) натисніть «Пуск»/«Виконати» (Start/Run). Латинськими літерами введіть у рядку «Відкрити» (Open) cmd або command (для Windows 98/ME). З'явиться чорне вікно командного рядка;

б) введіть у це вікно команду **ipconfig**. Навпроти напису «**Основний шлюз**» або **Default gateway** (для англійської версії) Ви побачите **IP-адресу** Вашого основного шлюзу. Він повинен мати такий вигляд: 10.x.x.x







6) натисніть Save і цей маршрут повинен відобразитися у Таблиці статичних маршрутів.



- 8. Прошивка. Можна знайти на офіційному сайті виробника: http://www.tplink.com/support/download.asp?a=1&m=TL%2DWR542G&h=V4
- 9. Відповіді на запитання, які ставлять найчастіше, можна знайти на офіційному сайті виробника за посиланням: http://www.tplink.com/support/faq.asp



